NOKIA 6133

QUICK START GUIDE

Thank you for purchasing the Nokia 6133 phone!
Use this guide to:

- Get familiar with your phone
- Install the SIM card, battery & microSD memory card
- Take a video & save as a video ring tone
- Take a picture & send it via picture messaging
- Play your music
- Get connected
- Get support

T··Mobile·®

9250720. Printed in Mexico.
All screen images are simulated.

NOKIA
Connecting People

1. CHECK IT OUT!

1. **Volume key** (▬)
   In the open or closed position, press up or down to adjust the volume.
2. **Mini display**
   View the clock, caller ID, active profile, and other information.
3. **Camera lens**
   Lens for camera and video recorder.
4. **Pop-Port™ connector**
   Connect a data cable to your compatible PC for exchanging data.
5. **Charger port**
   Connect your phone charger.
6. **Press-to-open button**
   For easy, one-hand operation, press to flip open the phone.
7. **Camera and video key** (●)
   Press to quickly activate the viewfinder even when the phone is closed.
8. **Power key** (⏻)
   Press to switch profiles or press and hold to turn the phone on/off.
9. **Left and right selection keys** (◜) (◝)
   Press to access the option shown above the key.
10. **Talk key** (✆)
    Press to make a call or to answer an incoming call.
11. **End key** (✆)
    Press to end a call. When you're not on a call, the End key will take you back to the Start screen.

2. GET STARTED

The SIM card

Your Nokia 6133 phone uses a convenient SIM card that holds information about your wireless service and contact information. If you already have a SIM card, you can transfer your contacts to your new phone by inserting the SIM card. If you do not have a SIM card or service for the phone, contact your wireless service provider.

Insert the SIM card and battery

1. With the back of the phone facing you, remove the back cover.
2. Release the SIM card door (fig. 2.1a).
3. Insert the SIM card with the metal contacts facing down (fig. 2.1b).
4. Snap the SIM card door into place.
5. With the metal contacts pointed downward, insert the battery into the slot (fig. 2.2).
6. Slide and lock the back cover into place (fig. 2.3).

fig. 2.1a/2.1b

fig. 2.2

fig. 2.3

The microSD memory card

The hot swappable microSD memory card offers expandable memory to store photos, videos, music, data files and other applications. It's hot swappable so you can insert or remove the memory card while the phone is on. Transfer files from your computer to the microSD with Nokia PC Suite and USB data cable (sold separately).

Insert the memory card

1. With the back cover removed, locate the memory card slot.
2. Insert the memory card as shown (fig. 2.4).
   NOTE: The memory card clicks when locked in place.
3. Replace the back cover.

fig. 2.4

3. CREATE AND SET A VIDEO RING TONE

The dual displays on your Nokia 6133 phone will have you seeing double, in a good way. Video ring tones and photo caller ID display on both screens when you receive a call. Switch your camera to video mode and create a video ringing tone, or download new ones from t-zones.

Create a video ring tone

1. Press the **Camera** key. (●)
2. Select **Options**. (◜)
3. Select **Video** (fig. 3.1). (◉)
4. Aim the viewfinder and select **Record** (fig. 3.2). (◉)
5. Select **Stop** to end the recording. (◝)
6. Select **Options**. (◜)
7. Scroll to and select **Use video clip** (fig. 3.3). (◉) (◉)
8. Scroll to and select **Set as incoming call video** (fig. 3.4). (◉) (◉)
9. Select **Yes**. (◉)

fig. 3.1

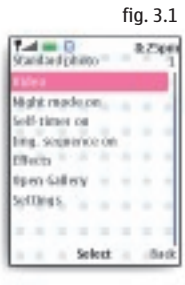

fig. 3.2

fig. 3.3

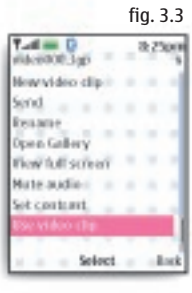

fig. 3.4

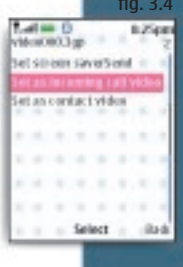

TIP! Zoom in Zoom out

Instantly opens with one press of a button

4. TAKE A PICTURE AND SEND VIA PICTURE MESSAGING

The 1.3 Megapixel camera (1280 x 1024) lets you communicate visually by taking quality photos in portrait and landscape modes. Either way, your pictures will look great on the vibrant 2.2" True Color QVGA display.

Take a picture in landscape mode and send via picture messaging

1. Press the **Camera** key. ( )
2. Position the phone horizontally with the **Camera** key on top (fig. 4.1).
3. Aim the viewfinder and press the **Camera** key to take the picture. ( )
4. Immediately after you take a picture select **Send**. ( )

   NOTE: If you return to camera mode before selecting **Send**, select **Options** > **View previous** to return to the picture.
5. Select **Options**. ( )
6. Select **Send**. ( )
7. Select **Add**. ( )
8. Scroll to and select **Contact**. ( ) ( )
9. Scroll to and select a contact. ( ) ( )
10. Scroll down once and enter the subject. ( )
11. Scroll down once and enter the Presentation message to display with the image (fig. 4.2). ( )
12. Select **Options**. ( )
13. Select **Send**. ( )

fig. 4.1

fig. 4.2

TIP! To access self portrait mode, turn on the camera in the closed position and press ( ).

5. LISTEN TO MUSIC

Take your music with you and listen to your MP3, WMA and eAAC+ music files. Or tune in the FM radio to your favorite local station.

Play music

1. Select **Menu**. ( )
2. Scroll to and select **My files**. ( ) ( )
3. Scroll to and select **Media**. ( ) ( )
4. Scroll to and select **Music player**. ( ) ( )
5. Select play (fig 5.1). ( )

fig. 5.1

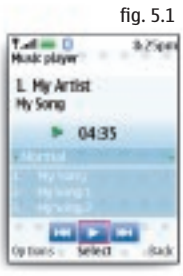

TIP! To access your playlist and other music player features, select **Options**. ( )

Nokia Music Pack

With the Nokia Music Pack (sold separately) you can take the audio capabilities of your Nokia 6133 phone to the next level. This enhancement bundle includes a microSD memory card that can hold up to 100 songs (fig. 5.2) and a USB card reader (fig. 5.3) so you can easily transfer music files from your computer to the memory card. You'll also get an audio adapter for headphones (fig. 5.4), powered speakers, and compatible car stereo systems. You'll even get an audio cable (fig. 5.5) so you can plug your phone into a home stereo system!

fig. 5.2

fig. 5.3

fig. 5.4

fig. 5.5

6. GET CONNECTED

Connect via Bluetooth wireless technology

Bluetooth wireless technology enables you to connect to a compatible headset with Bluetooth technology, print directly to a printer with Bluetooth technology and share files with other devices enabled with Bluetooth technology such as phones, PDAs and computers up to 30 feet away (fig. 6.1).

fig. 6.1

Connect with Nokia XpressPrint

Nokia XpressPrint, compatible with PictBridge, allows you to print directly to compatible printers over a wireless connection via Bluetooth technology or by inserting your microSD memory card into the printer's card reader (fig. 6.2). XpressPrint gives you options. In addition to printing pictures, you can print calendar details, contacts, email, and more.

XpressPrint

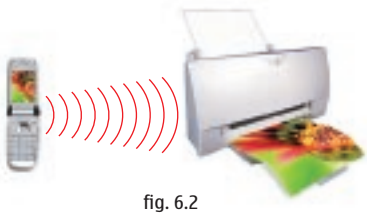

fig. 6.2

Connect for business and pleasure

The Nokia 6133 phone keeps you connected to others in several ways. Get the information you need instantly from the mobile web and XHTML browser. No matter where life takes you, connect with others using Text messaging, Picture messaging, Video messaging, Instant messaging (IM) and email.

TIP! To learn more specifics about connecting your phone, consult your Nokia 6133 User Guide or visit www.nokia.com/support.

7. EXPLORE SUPPORT OPTIONS

The ultimate in style and comfort, the Nokia 6133 phone combines the popular fold design with an extraordinary amount of features. Get ready to explore music, imaging, messaging, printing and more!

Nokia 6133 User Guide

For important safety and operational information consult the User Guide.

Nokia Support on the Web

Check www.nokia.com/support for the latest information and to help you get more from your new product.

1-888-NOKIA-2U (1-888-665-4228)

Nokia provides toll free customer support Monday – Friday from 8:00 a.m. to 12:00 a.m. EST and Saturday – Sunday from 10:00 a.m. to 7:00 p.m. EST.

Service Provider

Contact your service provider for questions regarding your wireless services.

© 2006 Nokia. All rights reserved. Nokia, Nokia Connecting People, and Pop-Port are trademarks or registered trademarks of Nokia Corporation. Other company and product names may be trademarks or trade names of their respective owners. Only devices that offer compatible multimedia message or email features can receive and display multimedia messages. Content appearance may vary. Some images and ring tones can not be forwarded. When using the features in this device, obey all laws and respect the privacy and legitimate rights of others. Wireless service is required to use many features. Some networks have limitations that affect how you can use this device. Contact T-Mobile about feature support and availability. Screen images are simulated. N4219

NOKIA
Connecting People